PEB-7613

Micro ATX motherboard

User's Manual

Edition: 1.0
2009/07/28

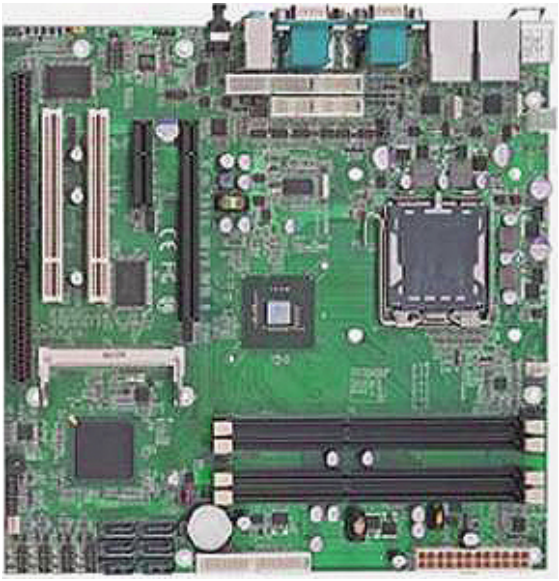

Copyright

Copyright 20 09. All rights reserved. This document is copyrighted and all rights are reserved. The information in this document is subject to change without prior notice to make improvements to the products.
This document contains proprietary information and protected by copyright. No part of this document may be reproduced, copied, or translated in any form or any means without prior written permission of the manufacturer.
All trademarks and/or registered trademarks contains in this document are property of their respective owners.

Disclaimer

The company shall not be liable for any incidental or consequential damages resulting from the performance or use of this product.
The company does not issue a warranty of any kind, express or implied, including without limitation implied warranties of merchantability or fitness for a particular purpose.
The company has the right to revise the manual or include changes in the specifications of the product described within it at any time without notice and without obligation to notify any person of such revision or changes.

Trademark

All trademarks are the property of their respective holders.

Packing List

Please check package component before you use our products.

Hardware: PEB-7613

Micro ATX motherboard x 1

Cable Kit:

SATA Cable x 2

Floppy flat cable x 1

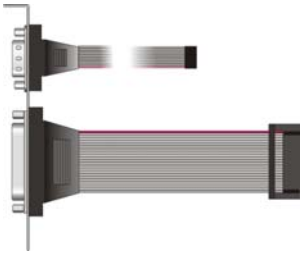

DB25 & DB9 cable x 1

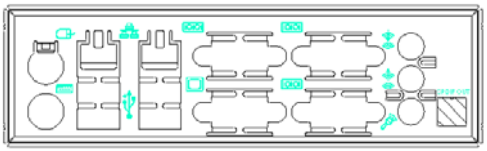

I/O Shield x 1

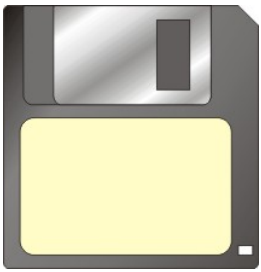

RAID drivers Disc for Windows XP

Other Accessories:

Divers CD (including User's Manual) x 1

Index

Chapter1 <Introduction> 7
1.1 <Product Overview> 7
1.2 <Product Specification> 8
1.3 <Block Diagram> 10
1.4 <Mechanical Drawing > 11
Chapter 2 <Hardware Setup> 12
2.1 <Connector Location> 12
2.2 <Component Placement> 13
2.3 <Jumper Reference> 14
2.4 <Connector Reference> 15
2.4.1 <Internal Connectors> 15
2.4.2 <External Connectors> 15
2.5 <CPU and Memory Setup> 16
2.5.1 <CPU installation> 16
2.5.2 <Memory installation> 17
2.6 <CMOS Setup> 18
2.7 <Serial ATA installation> 19
2.8 <Floppy Installation> 20
2.9 <LAN installation> 21
2.10 <Onboard Display Interface> 22
2.10.1 <Analog Display> 22
2.11 <Audio Installation> 23
2.12 <GPIO and SMBUS interface> 25
2.13 <USB Installation> 26
2.14 <Power and Fan Installation> 28
2.15 <Serial Port> 30
2.16 <Switch and Indicator> 33

Chapter 3 <System Configuration> 35
3.1 <SATA configuration> 35
3.2 <SATA RAID Configuration> 36
3.3 <Audio Configuration> 40
3.4 <Video Memory Setup> 41
3.5 <Display Properties Setting> 43
Chapter 4 <BIOS Setup> 45
Appendix A <I/O Port Pin Assignment> 47
A.1 <Serial ATA Port> 47
A.2<Floppy Port> 47
A.3 <IrDA Port> 48
A.5 <VGA Port> 49
A.6 <LAN Port> 49
Appedix B <System Resources> 50
B.1 <I/O Port Address Map> 50
B.2 <Memory Address Map> 52
B.3 <System IRQ Resources> 53
Appedix C <Flash BIOS> 54
C.1 <BIOS Auto Flash Tool> 54
C.2 <Flash Method> 54
Appendix D <Programming GPIO's> 55
Appendix E <Watch Dog timer Setting > 56
Contact Information 57

(This Page is Left for Blank)

Chapter1 <Introduction>

1.1 <Product Overview>

PEB-7613 is the motherboard with last Intel desktop technology with Micro ATX form factor. Based on Intel® Q45 and ICH10DO, the board integrates a new Core 2 Quad / Core 2 Duo Celeron processor 775-pin socket, DDR3 memory socket, Intel® Graphic Media Accelerator 4500 technology, Serial ATA II with RAID function for a powerful desktop system.

Intel® LGA775 processor

The Intel® Core 2 Quad / Core 2 Duo / Celeron processor now comes with a new form factor with 775-pin PLGA package, for 800/1066/1333MHz front-side-bus, 12MB L2 cache, for 65nm and 45nm manufacturing technology, the PLGA processor without pin header on solder side can make user installing the processor on the socket easier.

Intel® Q45 and ICH10DO chipset

The Intel Q45 integrates DDR3 800/1066MHz for memory, and Graphic Media Accelerator (GMA) 4500 technology for new graphic engine. It can provide up to 1024MB of frame buffer when you install over 1GB of system memory. The ICH10DO integrates with up to 12 USB2.0 interfaces, and serial ATA II interface with RAID function.

PCI-Express interface

PEB-7613 integrates one x16 and one x4 PCI-Express interface, it can provide up to 8GB/s of bandwidth.

Flexible Extension Interface

The board provides Two PCI-slot for graphics card, it also can support PCI-slot for LAN card or other devices. The board also provides mini-PCI socket and ISA slot.

1.2 <Product Specification>

General Specification	
Form Factor	Micro ATX motherboard
CPU	Intel® Core 2 Quad / Core 2 Duo / Celeron processor With **LGA775** socket Package type: LGA 775 Front side bus: 800/1066/1333MHZ (200/266/333MHz x 4)
Memory	2 x 240-pin DDR3 800/1066MHz SDRAM up to 4GB Unbufferred, none-ECC memory supported only
Chipset	Intel® Q45 (Northbridge) and ICH10DO (Southbridge)
BIOS	Phoenix-Award v6.00PG 8Mb SPI flash BIOS
Green Function	Power saving mode includes doze, standby and suspend modes. ACPI version 1.0 and APM version 1.2 compliant
Watchdog Timer	System reset programmable watchdog timer with 1 ~ 255 sec./min. of timeout value
Real Time Clock	Intel® ICH10DO built-in RTC with lithium battery
Serial ATAII	Intel® ICH10DO integrates 6 Serial ATA II interface RAID 0, 1,5,10 Intel Matrix Storage Technology supported
Multi-I/O Port	
Chipset	Intel® 82801JDO (ICH10DO) with Winbond® W83627DHG Controller
Serial Port	Five RS-232 and one RS232/422/485 serial ports
USB Port	Twelve Hi-Speed USB 2.0 ports with 480Mbps of transfer rate
Floppy Port	One Floppy port
IrDA Port	One IrDA compliant Infrared interface supports SIR
K/B & Mouse	External PS/2 keyboard and mouse ports on rear I/O panel
GPIO	One 12-pin Digital I/O connector with 8-bit programmable I/O Interface
Smart Fan	One CPU fan connectors for fan speed controllable
VGA Display Interface	
Chipset	Intel® Q45 GMA4500 (Graphic Memory Controller Hub)
Frame Buffer	Up to 1024MB shared with system memory
Display Type	CRT, LCD monitor with analog display
Connector	External DB15 female connector on rear I/O panel
Ethernet Interface	
Controller	Two Intel 82574L Gigabit Ethernet controller
Type	Triple speed 10/100/1000Base-T Auto-switching Fast Ethernet Full duplex, IEEE802.3U compliant
Connector	Two External RJ45 connectors with LED on rear I/O panel

Audio Interface	
Chipset	Intel® ICH10DO with Realtek ALC888HD Audio Intel High Definition Audio compliance
Interface	2 channels sound output
Connector	External 3 phone jack for 2 channel audio on rear I/O panel External SPDIF connector on rear I/O panel Internal 10-pin header for line-out, MIC-in, 4-pin header for CD-IN
Expansive Interface	
PCI-Express One	16x PCI-Express slot (***compatible with x1 slot***) (16x PCI-Express slot no supply 1x PCI-Express RAID Card) One 4x PCI-Express slot (**compatible with x 1 slot**) Up to 8GB/s of transfer bandwidth Power supply: +3.3V, +12V
PCI	Two-PCI slot (32-bit, 33MHz) Power supply: +3.3V, +5V, +12V, -12V
Mini PCI	One Mini-PCI socket **TYPE III A** (32-bit, 33MHz) Power supply: +3.3V, +5V
ISA	One ISA slots (without DMA supported)
Power and Environment	
Power Requirement	Standard ATX **24-pin (20-pin is compatible)** power supply Additional +12V 4-pin power connector
Dimension	244 (L) x 244 (H) mm
Temperature	Operating within 0 ~ 60^{O}C (32 ~ 140^{O}F) Storage within –20 ~ 85^{O}C (-4 ~ 185^{O}F)
Ordering Code	
PEB-7613	Support Intel Core 2 Quad LG A775 with DDRIII, Onboard VGA Dual Intel Gigabit LAN, 12 x USB2.0, HD Audio, 6 x COM , GPIO, SATA and ISA .

1.3 <Block Diagram>

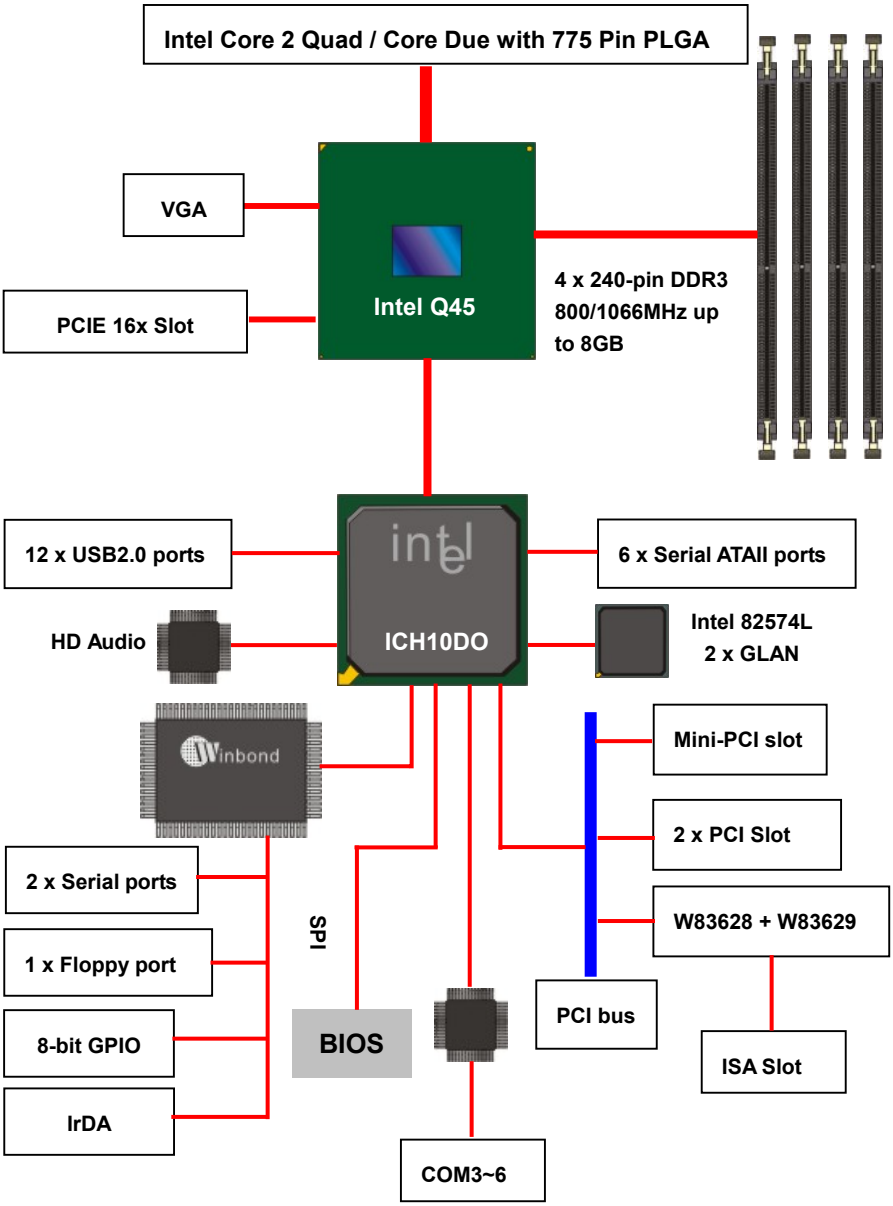

1.4 <Mechanical Drawing >

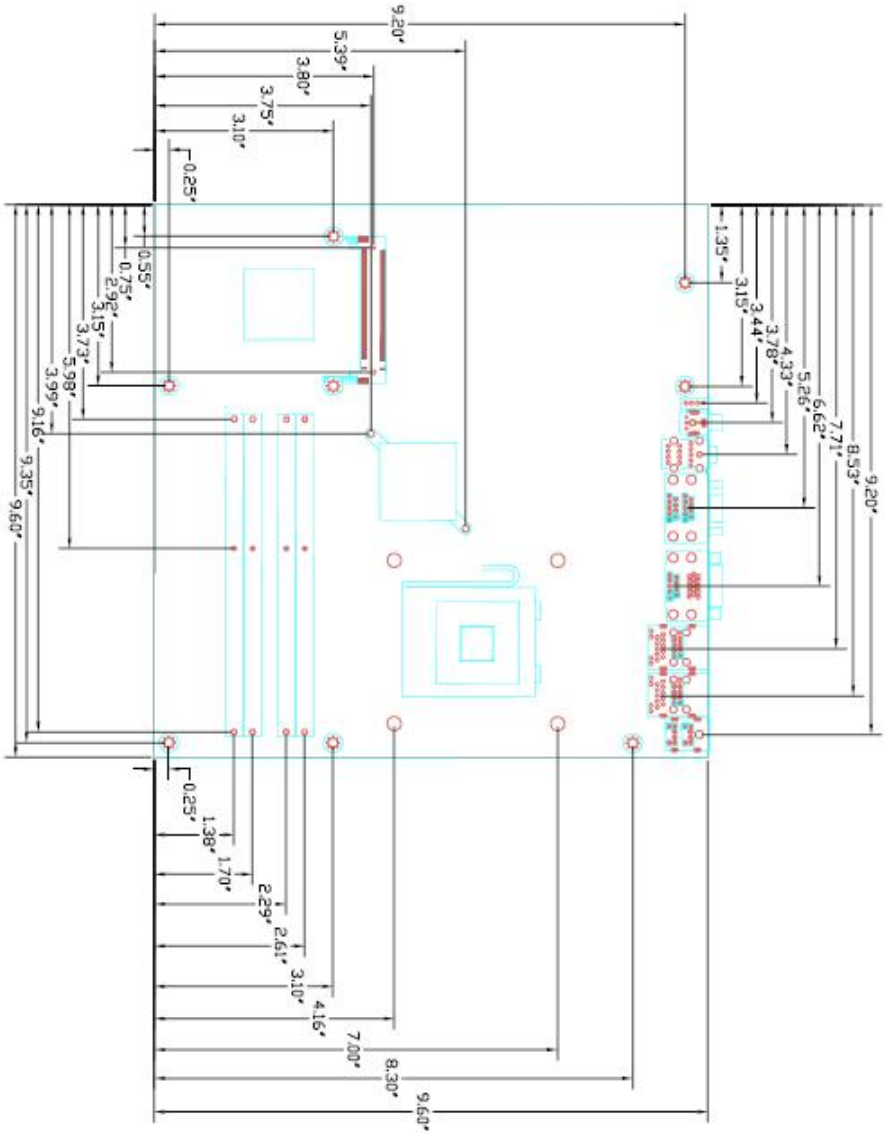

Unit: inch

Chapter 2 <Hardware Setup>

2.1 <Connector Location>

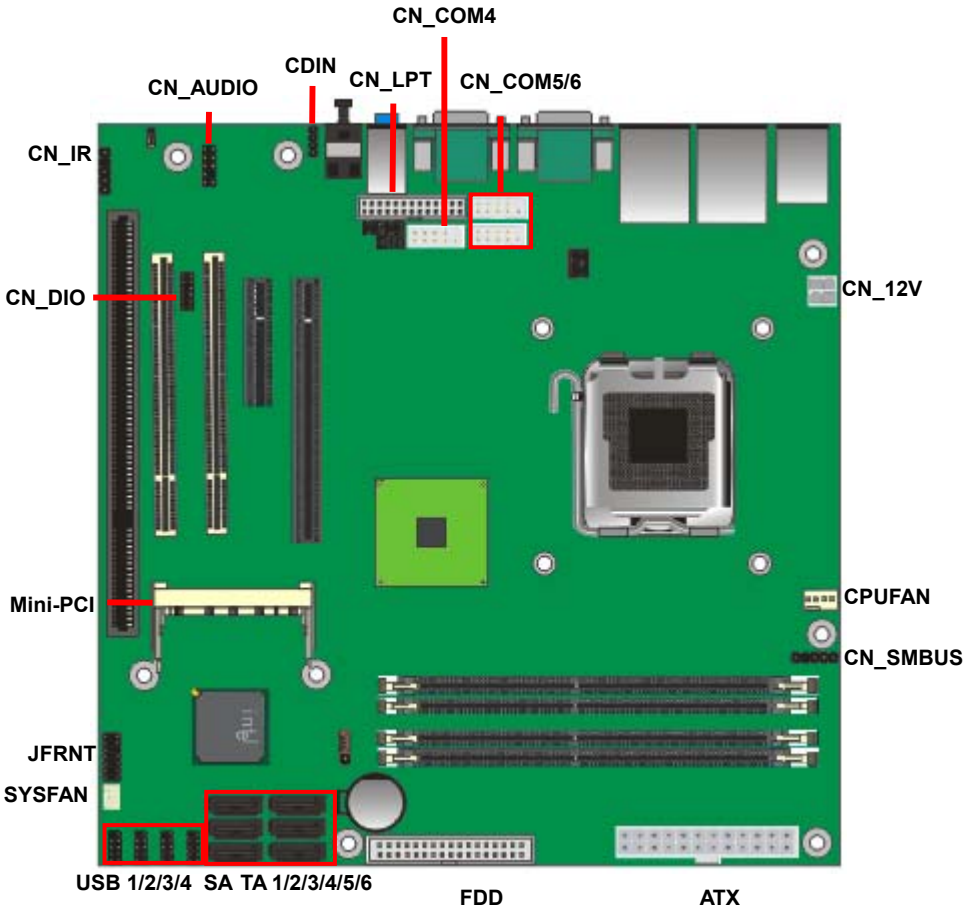

2.2 <Component Placement>

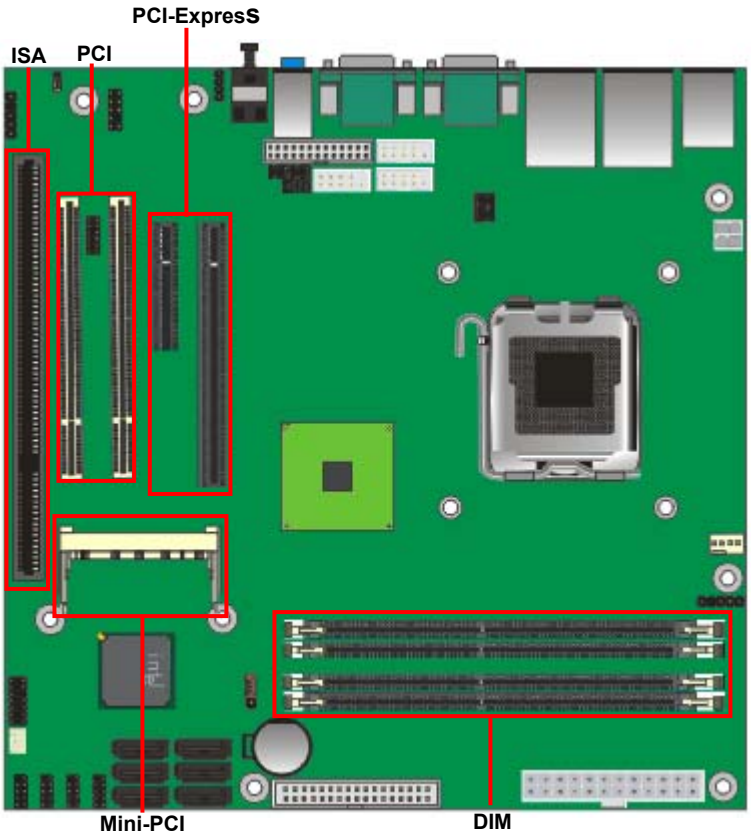

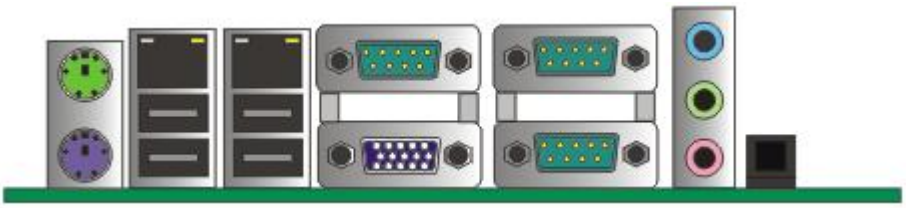

2.3 <Jumper Reference>

Jumper	Function
JRTC	CMOS Operating/Clear Setting (Page 18)
JP1	COM1 signal mode switch (For Pin-1 & Pin-9) (Page 32)
JP2	COM2 signal mode switch (For Pin-1 & Pin-9) (Page 32)
JAT	Power mode select
JCSEL1 **JCSEL2**	CN_COM2 RS-232 RS422 RS485 Setting (Page 32) CN_IR IrDA Setting (Page 32)

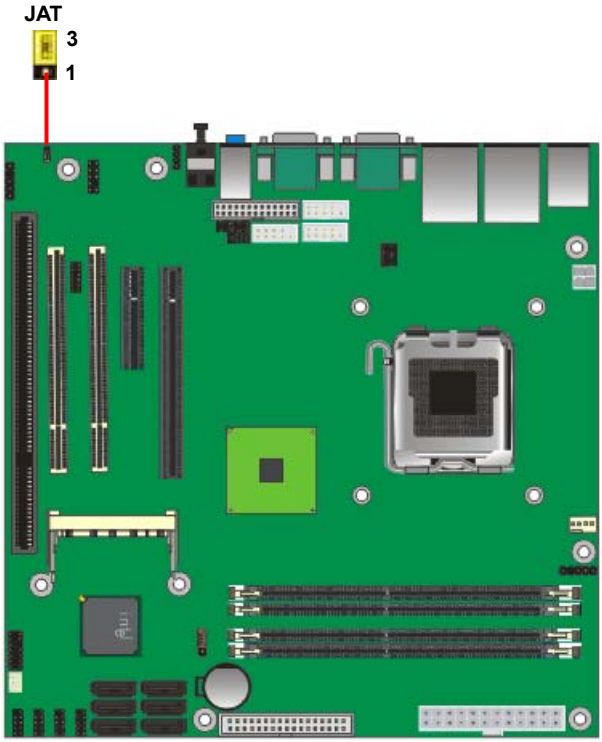

Jumper: JAT

Type: Onboard 3-pin jumper

JAT	Mode
1-2	AT Power mode
2-3	ATX Power mode

Default setting

2.4 <Connector Reference>

2.4.1 <Internal Connectors>

Connector	Function	Remark
CPU	LGA775 CPU socket	
DDR3_A1/A2/B1/B2	240 –pin DDR2 SDRAM DIMM socket	
FDD	34-pin slim type floppy connector	
S_ATAII1/2/3/4/5/6 7-pin	Serial ATA II connector	
ATX	24-pin power supply connector	
CN_12V	4-pin +12V additional power supply connector	
CN_AUDIO	5 x 2-pin audio connector	
CDIN	4-pin CD-ROM audio input connector	
CN_DIO	6 x 2-pin digital I/O connector	
CN_USB1/2/3/4	10-pin USB connector	
CPUFAN	4-pin CPU cooler fan connector	
SYSFAN	3-pin system cooler fan connector	
NBFAN	3-pin Northbridge cooler fan connector	
CN_IR	5-pin IrDA connector	
CN_SMBUS	5-pin SMBUS connector	
JFRNT	14-pin front panel switch/indicator connector	
PCI1/2	120-Pin PCI socket	
CN_COM3/4/5	5 x 2-pin com connector	

2.4.2 <External Connectors>

Connector	Function	Remark
PS2	PS/2 Keyboard/Mouse connector	
CRT+COM1	DB15 VGA + Serial port connector	
USB_RJ45_1/2	Dual USB and one RJ45 LAN Port	
COM 2/3	Serial port connector	
AUDIO Audio	connectors	
SPDIF	SPDIF digital audio output connector	

2.5 <CPU and Memory Setup>

2.5.1 <CPU installation>

PEB-7613 has a LGA775 CPU socket on board; please check following steps to install the processor properly.

Attention ***If PEB-7613 need RMA please Keep CPU socket cover on the CPU Socket.***

Warning ***If CPU Socket internal Pin damage We could not provide warranty.***

Intel® Quad Core 2 Quad / Core 2 Duo
Cleron processor
Package type: 775 pin PLGA
FSB:/800/1066/1333MHz
Manufacturing: 65nm / 45nm
Intel Hyper Threading Technology and
Core 2 Duo Quad / Duo supported

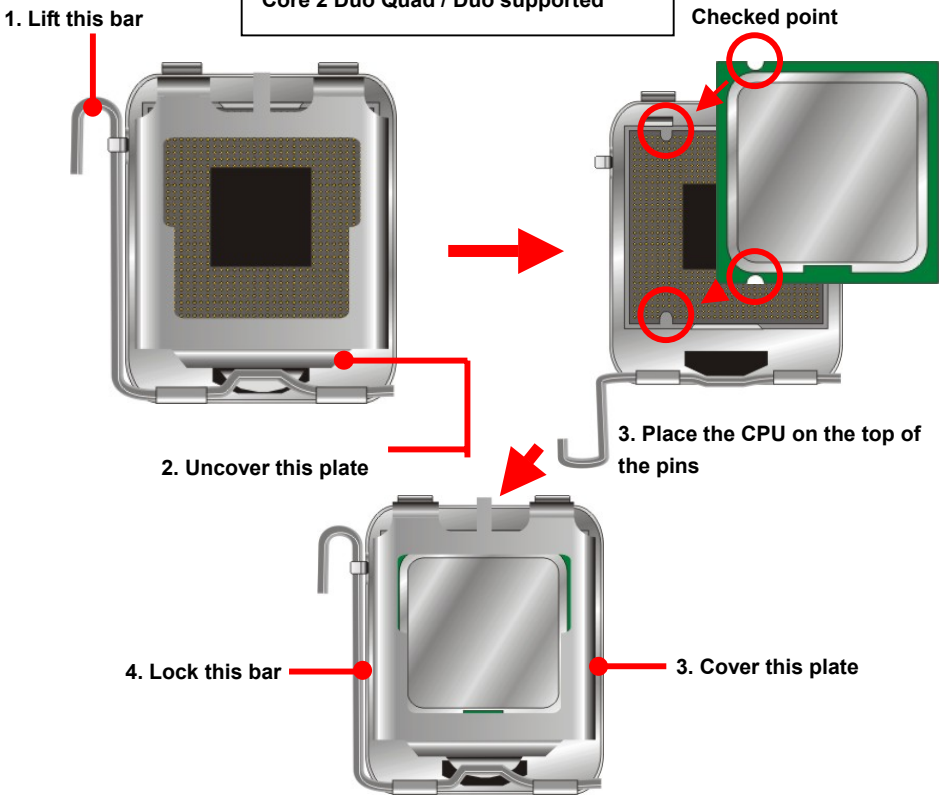

Notice: Please place the CPU on the pins tenderly to avoid bending the pins

2.5.2 <Memory installation>

PEB-7613 has four 240-pin DDR3 DIMM support up to 8GB of memory capacity. The memory frequency supports 800/1066 MHz. Only Non-ECC memory is supported.

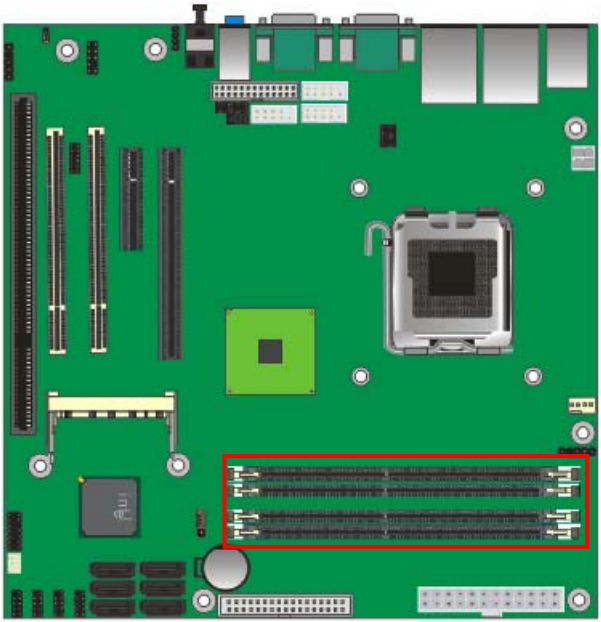

DDRIII A1/A2/B1/B2

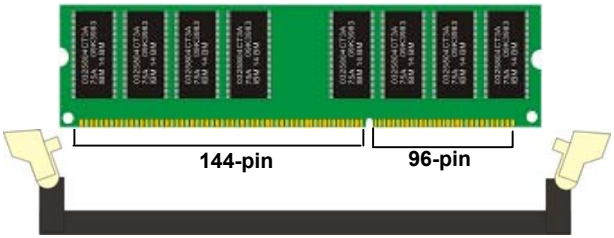

Please check the pin number to match the socket side well before installing memory module.

2.6 <CMOS Setup>

The board's data of CMOS can be setting in BIOS. If the board refuses to boot due to inappropriate CMOS settings, here is how to proceed to clear (reset) the CMOS to its default values.

Jumper: JRTC

Type: Onboard 3-pin jumper

JRTC	Mode
1-2 Clear	CMOS
2-3	Normal Operation

Default setting

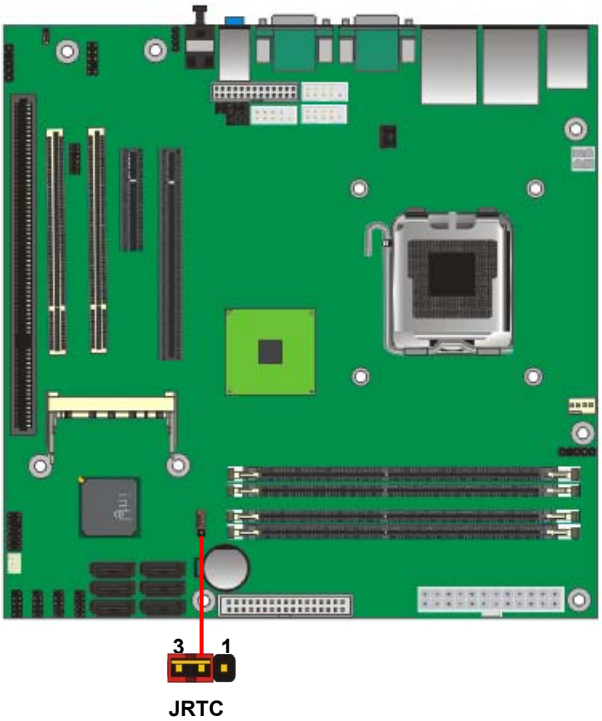

2.7 <Serial ATA installation>

PEB-7613 has four Serial ATA II interfaces with RAID function, the transfer rate of the Serial ATA II can be up to 300MB/s. Please go to http://www.serialata.org/ for more about Serial ATA technology information. Based on Intel® ICH10DO, it supports **Intel® Matrix Storage Technology** with combination of RAID 0, 1,5 and 10. The main features of RAID on ICH10DO are listed below:

1. Supports for up to RAID volumes on a single, two-hard drive RAID array.
2. Supports for two, two-hard drive RAID arrays on any of six Serial ATA ports.
3. Supports for Serial ATA ATAPI devices.
4. Supports for RAID spares and automatic rebuild.
5. Supports on RAID arrays, including NCQ and native hot plug.

For more information please visit Intel's official website.

For more about the system setup for Serial ATA, please check the chapter of SATA configuration.

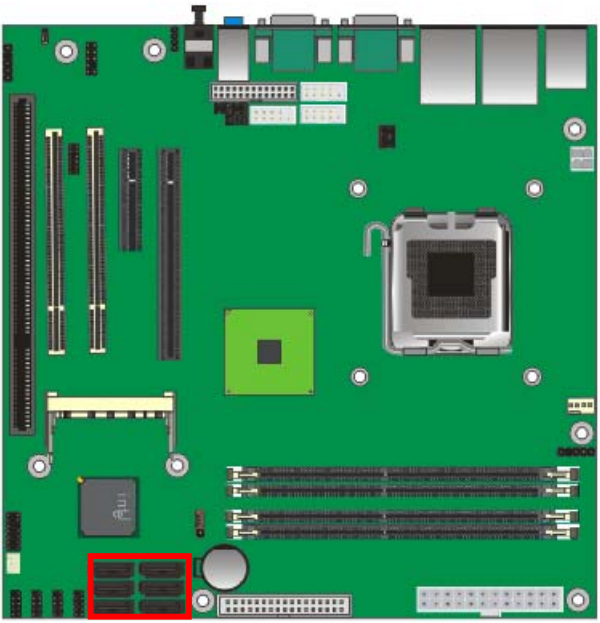

SATA1/2/3/4/5/6

2.8 <Floppy Installation>

PEB-7613 has one 34-pin floppy interface.

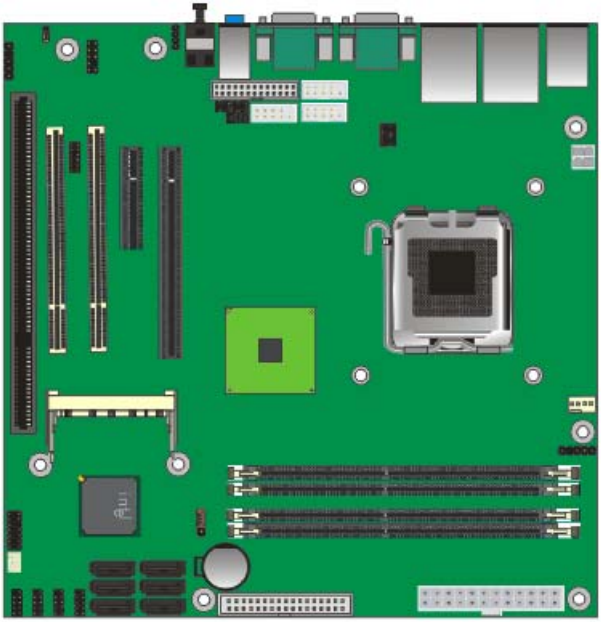

FDD

2.9 <LAN installation>

The board integrates with two Intel 82574L Gigabit Ethernet controllers, as the PCI Express bus. T he Intel 82574L support s triple spe ed of 10/100/1000Bas e-T, with IEEE802.3 compliance and Wake-On-LAN supported.

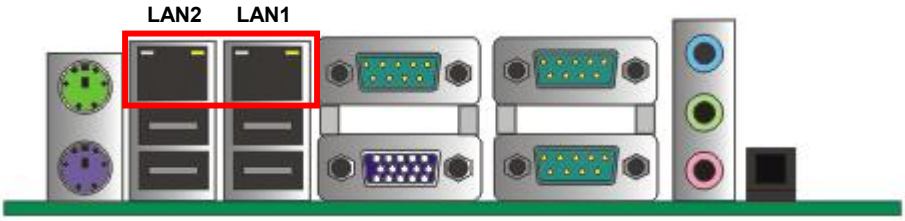

2.10 <Onboard Display Interface>

Based on Intel Q45 chipset with built-in graphics, the board provides one DB15 Connector on real external I/O port

2.10.1 <Analog Display>

Please connect your CRT or LCD monitor with DB15 male connector to the onboard DB15 female connector on rear I/O port

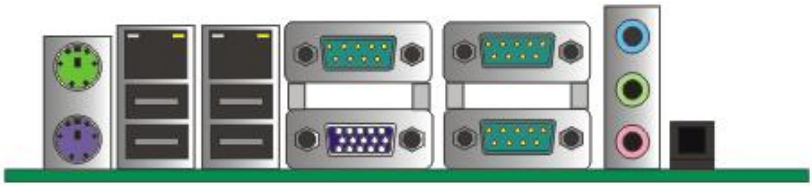

CRT

2.11 <Audio Installation>

The board integrates onboard audio interface with REALTEK ALC888 codec, with Intel next generation of audio standard as High Definition Audio, it offers more vivid sound and other advantages than former HD audio compliance.

The main specifications of ALC888 are:

- **High-performance DACs with 100dB S/N ratio**
- **2 DAC channels support 16/20/24-bit PCM format for 2 audio solution**
- **16/20/24-bit S/PDIF-OUT supports 44.1K/48K/96kHz sample rate**
- **Compatible with HD**
- **Meets Microsoft WHQL/WLP 2.0 audio requirements**

The board provides 2 channels audio phone jacks on rear I/O port, Line-in/MIC-in port s for front I/O panel through optional cable.

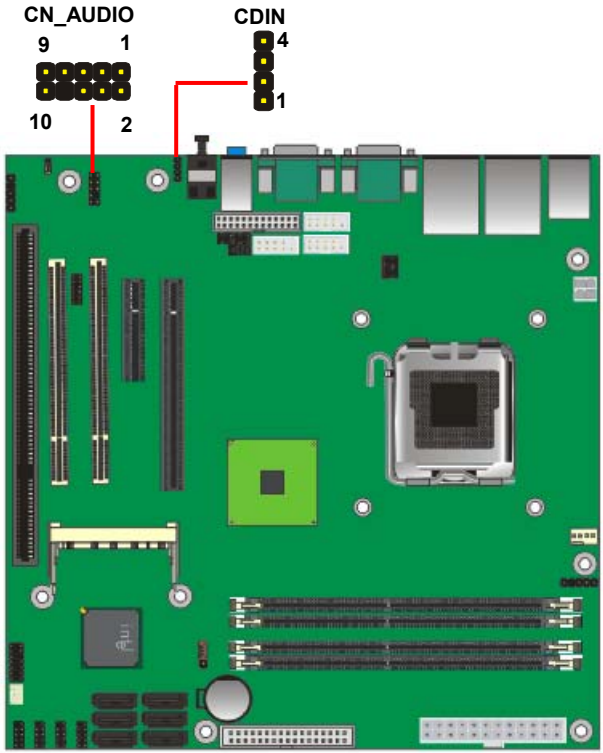

Connector: CN_AUDIO

Type: 10-pin (2 x 5) header (pitch = 2.54mm)

Pin	Description	Pin	Description
1	MIC_L	2	Ground
3	MIC_R	4	ACZ_DET
5	Speaker_R	6	MIC Detect
7	SENSE	8	N/C
9	Speaker_L	10	Speaker Detect

Connector: CDIN

Type: 4-pin header (pitch = 2.54mm)

Pin	Description
1	CD – Left
2	Ground
3	Ground
4	CD – Right

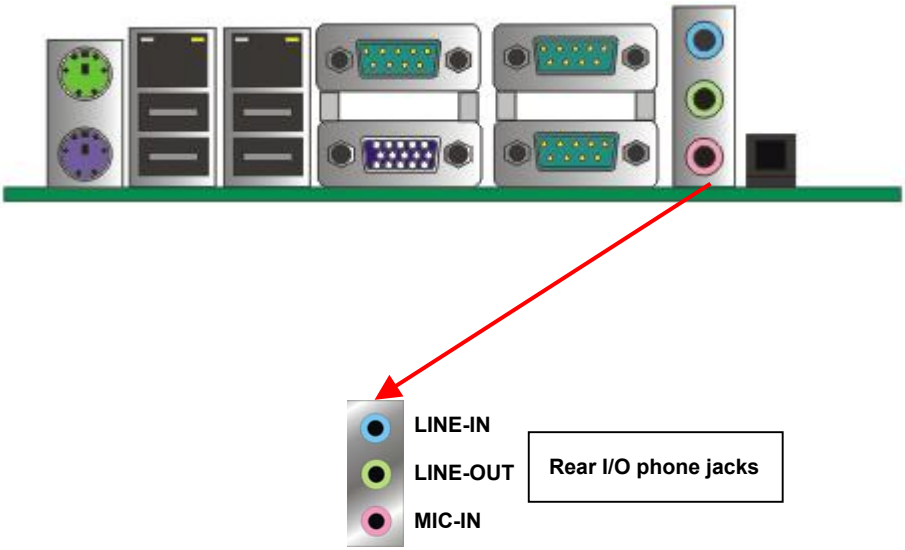

2.12 <GPIO and SMBUS interface>

The board provides a pr ogrammable 8-bit digital I/O interface, and a SMBUS (S ystem management bus) interface for control panel application.

Connector: **CN_DIO**
Type: onboard 2 x 6-pin header (pitch=2.0mm)

Pin	Description	Pin	Description
1	Ground	2	Ground
3	GP10	4	GP14
5	GP11	6	GP15
7	GP12	8	GP16
9	GP13	10	GP17
11	VCC	12	+ 12V

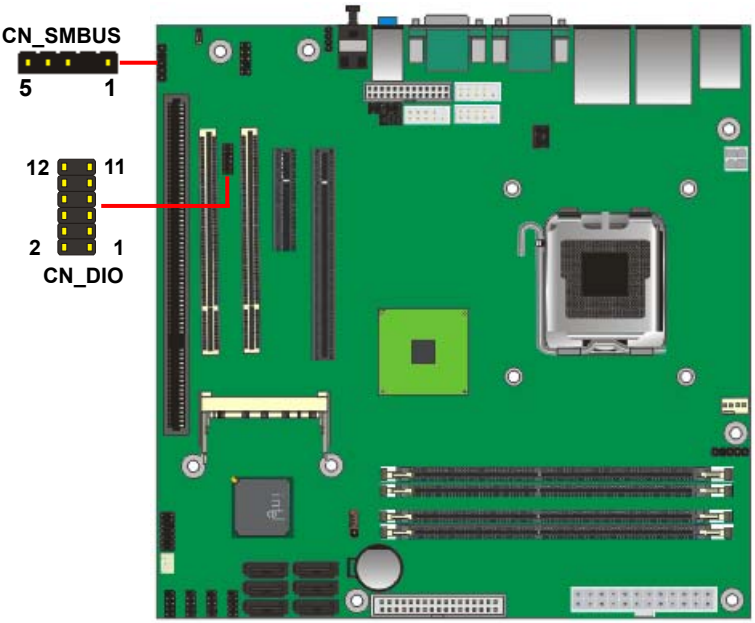

Connector: **CN_SMBUS**
Type: 5-pin header for SMBUS Ports (pitch = 2.54mm)

Pin	Description
1	VCC
2	N/C
3	SMBDAT A
4	SMBCLK
5	Ground

2.13 <USB Installation>

PEB-7613integrates eight USB2.0 ports. The specifications of USB2.0 are listed below:

Interface	USB2.0
Controller Intel	ICH10DO
Transfer Rate	Up to 480Mb/s
Voltage 5V	

The Intel ® ICH10DO c ontains t wo En hanced H ost Co ntroller I nterface (EHCI) an d fi ve Universal H ost Controll er Interfaces (UHCI), it can determine whether yo ur connected device is for USB1.1 or USB2.0, and change the transfer rate automatically.

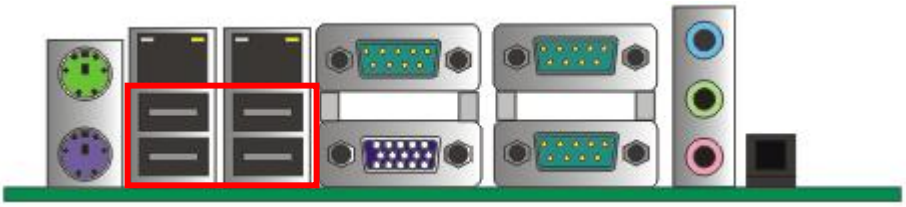

USB

Connector: **CN_USB1/2/3/4**

Type: 10-pin (5 x 2) header (pitch = 2.54mm)

Pin	Description	Pin	Description
1	VCC	2	VCC
3	Data0-	4	Data1-
5	Data0+	6	Data1+
7	Ground	8	Ground
9	Ground	10	N/C

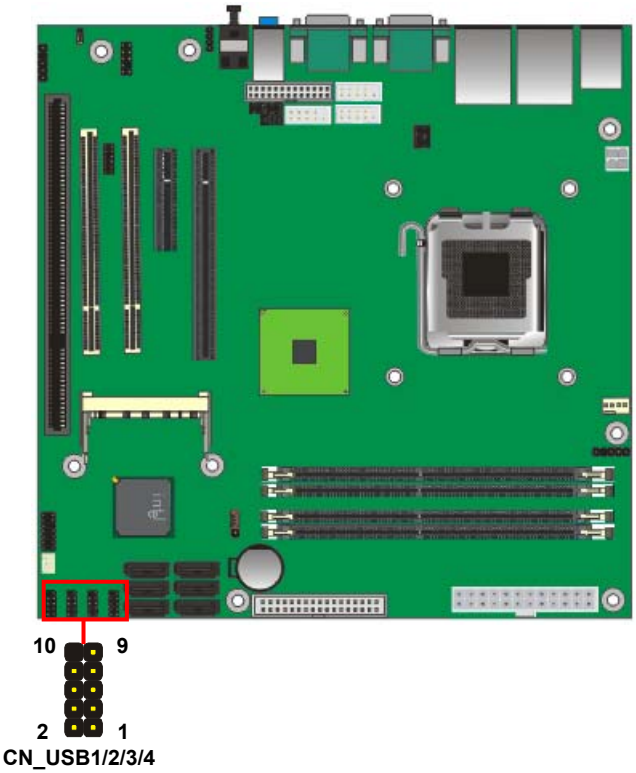

2.14 <Power and Fan Installation>

The **PEB-7613** p rovides a st andard A TX po wer sup ply with **24-pin** A TX connect or an d additional 12 V connector , an d the boar d provid es one **4-pin** fan conne ctors supporti ng smart fan for CPU cool er and one 3- pin cooler fan conn ectors for s ystem and N orthbridge chip. The 4-pin CN_12V additional power connector is necessary for CPU powering; please connect this well before you finishing the system setup.

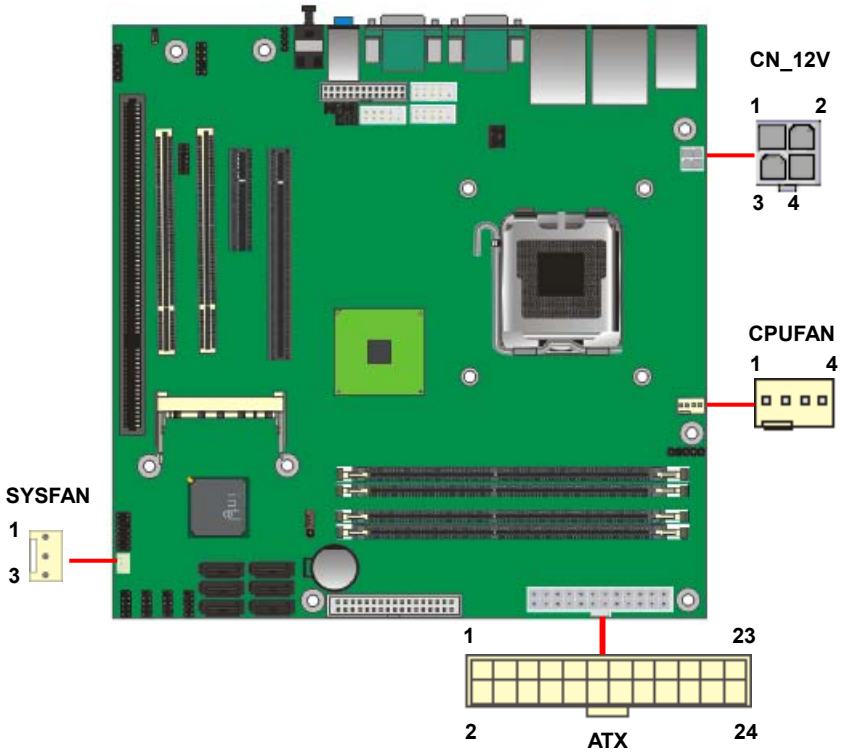

Connector: **ATX**
Type: 24-pin ATX power connector

PIN assignment			
1 3.3V		13	3.3V
2 3.3V		14	-12V
3 GND		15	GND
4 5V		16	PS_ON
5 GND		17	GND
6 5V		18	GND
7 GND		19	GND
8 PW	_OK	20	-5V
9 5V_SB		21	5V
10 12V		22 5V	
11 12V		23	5V
12 3.3V		24 GND	

Connector: **CN_12V**
Type: 4-pin standard Pentium 4 additional +12V power connector

Pin	Description	Pin	Description
1	Ground	2	Ground
3	+12V	4	+12V

Connector: **CPUFAN**
Type: 4-pin fan wafer connector

Pin	Description	Pin	Description
1	Ground	2	+12V
3	Fan Speed Detection	4	Fan Control

Connector: **SYSFAN**
Type: 3-pin fan wafer connector

Pin	Description	Pin	Description	Pin	Description
1	Ground	2	+12V	3	Sense

2.15 <Serial Port>

The board supports Three RS232 serial port and one jumper selectable RS232/422/485 serial ports. The jumper JCSEL1 & JCSEL2 can let you configure the communicating modes for COM2.

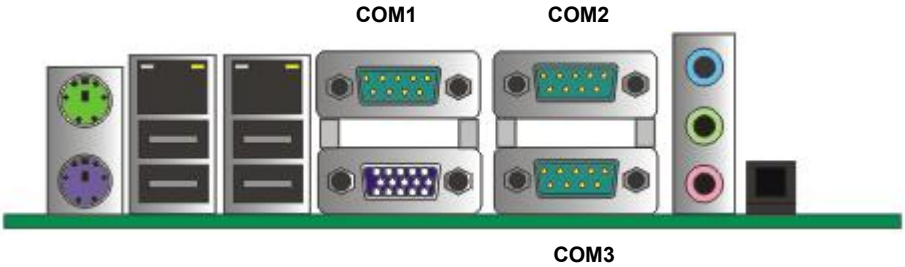

Connector: **COM2**
Type: 9-pin D-sub male connector on bracket for COM2

Pin	Description	Pin	Description
1	DCD/422TX-/485-	2	RXD/422TX+/485+
3	TXD/422RX+	4	DTR/422RX-
5	GND	6	DSR
7	RTS	8	CTS
9	RI	10	N/C

Setting RS-232 & RS-422 & RS-485 for COM2

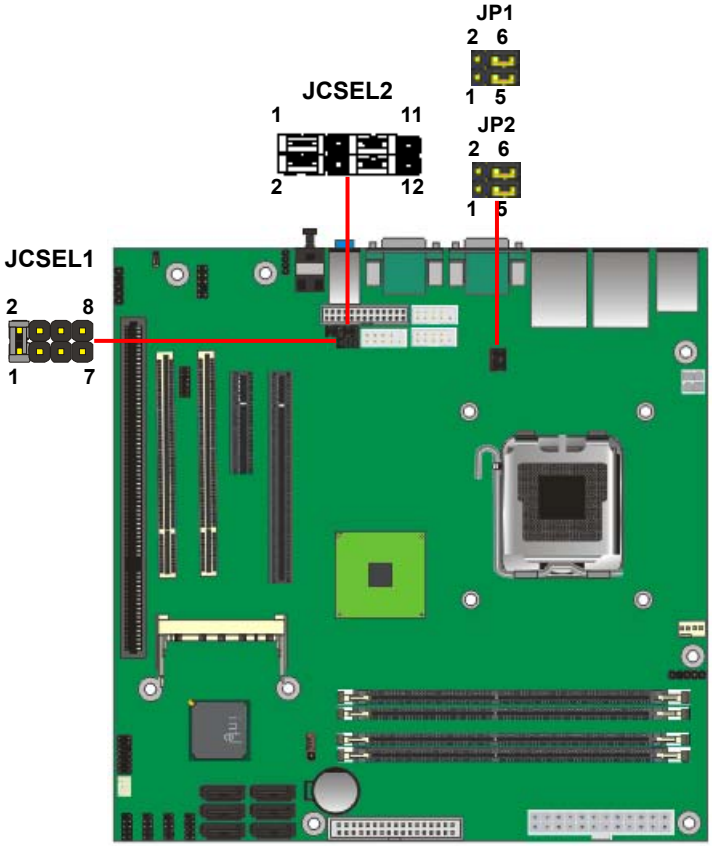

Function	JCSEL1	JCSEL2
SIR		
RS-422		
RS-485		
RS-232		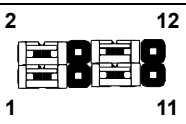

Default setting : **JCSEL1: (1-2) JCSEL2: (1-3, 2-4, 7-9, 8-10)**

Jumper: **JP1/JP2 (COM1/2)**
Type: onboard 6-pin header

Power Mode	JP1/JP2
Pin 1 with 5V Power	1-3,4-6
Pin 9 with 12V Power	2-4,3-5
Default setting: 3-5, 4-6	

2.16 <Switch and Indicator>

The **JFRNT** provides front control panel of the board, such as power button, reset and beeper, etc. Please check well before you connecting the cables on the chassis.

Connector: **JFRNT**
Type: onboard 14-pin (2 x 7) 2.54-pitch header

Function	Signal	PIN		Signal	Function
SATA LED	HDLED+ 1		2	PWDLED+	**Power LED**
	HDLED- 3		4	N/C	
Reset	Reset+ 5		6	PWDLED-	
	Reset- 7		8	SPKIN+	**Speaker**
	N/C 9		10	N/C	
Power Button	PWRBT+ 1	1	12	N/C	
	PWRBT- 13		14	SPKIN-	

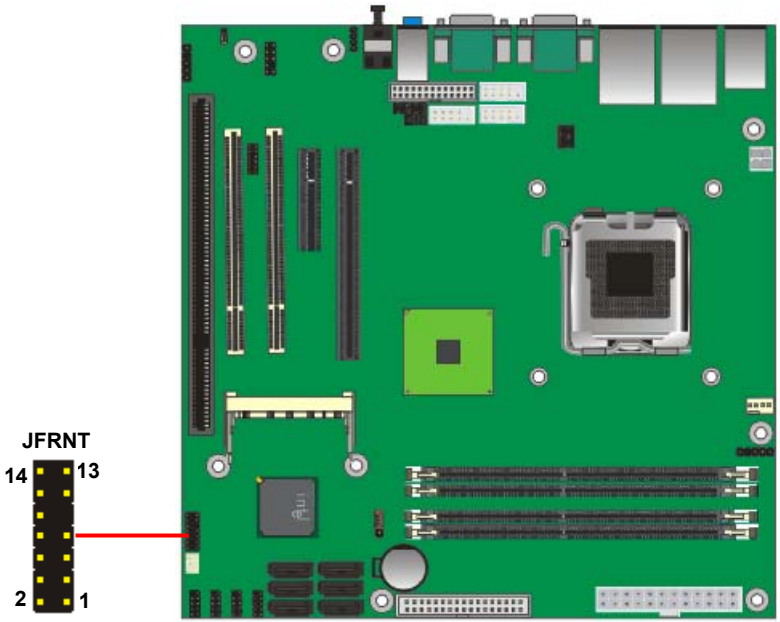

(This Page is Left for Blank)

Chapter 3 <System Configuration>

3.1 <SATA configuration>

SATA Mode:

This option can let you select whether the Serial ATA hard drives would work under normal IDE mode or RAID mode. The RAID mode need more than one HDD is applied.

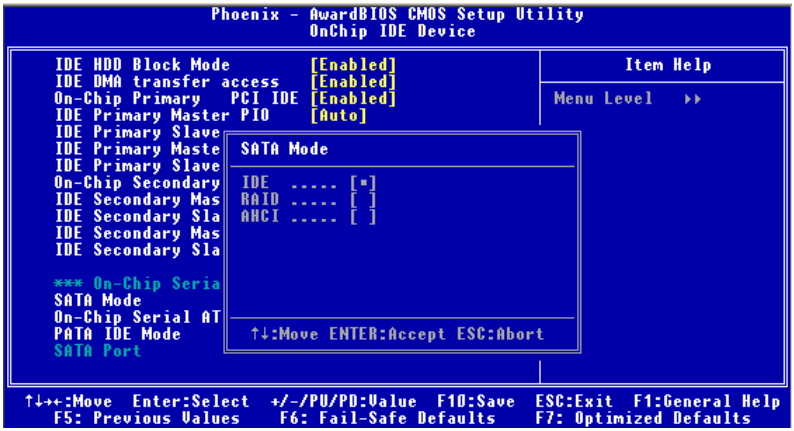
Phoenix - AwardBIOS CMOS Setup Utility
OnChip IDE Device
IDE HDD Block Mode [Enabled]
IDE DMA transfer access [Enabled]
On-Chip Primary PCI IDE [Enabled]
IDE Primary Master PIO [Auto]
Item Help
Menu Level ▸▸
SATA Mode
IDE ..... [*]
RAID ..... [ ]
AHCI ..... [ ]
↑↓:Move ENTER:Accept ESC:Abort
*** On-Chip Seria
SATA Mode
On-Chip Serial AT
PATA IDE Mode
SATA Port
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

3.2 <SATA RAID Configuration>

The board integrates Intel ® ICH10DO with RAID function for Serial ATA II drives, and supports the configurations below:

RAID 0 (S tripping): Two hard drives operating as one drive for optimized data R/ W performance. It needs two unused drives to build this operation.

RAID 1 (Mirroring): Copies the data from first drive to second drive for data security, and if one drive fails, the system would access the applications to the workable drive. It needs two unused drives or one used and one unused drive to build this operation. The second drive must be the same or lager size than first one.

RAID 5 (striping with parity)

A RAID 5 array contains three or more hard drives where the data is divided into manageable blocks called strips. Parity is a mathematical method for recreating data that was lost from a single drive, which increases fault-tolerance. The data and parity are striped across all the hard drives in the array. The parity is striped in a rotating sequence to reduce bottlenecks associated with the parity calculations.

RAID 10 (RAID 0+1)

A RAID 10 array uses four hard drives to create a combination of RAID levels 0 and 1. The data is striped across a two-drive array forming the RAID 0 component. Each of the drives in the RAID 0 array is then mirrored by a RAID 1 component.

Intel Matrix Storage Technology: This technology would allow you to use **RAID 0+1** mode on only two drives (4 drives needed on traditional RAID 0+1). It will create two partitions on each hard drive to simulate **RAID 0** and **RAID 1**. It also can let you modify the partition size without re-formatted.

For more information of Intel Matrix Storage Technology, please visit Intel's website.

If you need to install an operation system on the RAID set, please use the driver disk attached in the package when it informs you to obtain the RAID drivers.

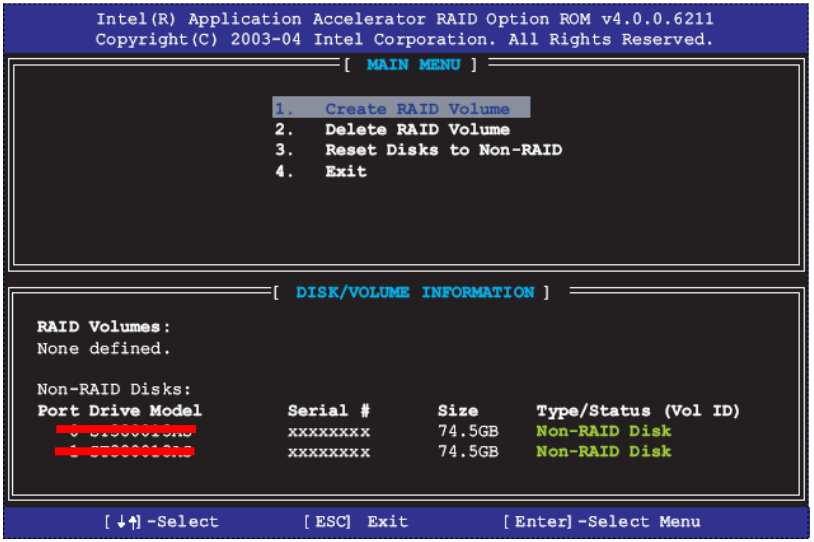
Intel(R) Application Accelerator RAID Option ROM v4.0.0.6211
Copyright(C) 2003-04 Intel Corporation. All Rights Reserved.
[MAIN MENU]
1. Create RAID Volume
2. Delete RAID Volume
3. Reset Disks to Non-RAID
4. Exit
[DISK/VOLUME INFORMATION]
RAID Volumes:
None defined.
Non-RAID Disks:
Port Drive Model Serial # Size Type/Status (Vol ID)
xxxxxxxx 74.5GB Non-RAID Disk
xxxxxxxx 74.5GB Non-RAID Disk
[↓↑]-Select [ESC] Exit [Enter]-Select Menu

Please press **<CTRL+I>** to enter the RAID configuration menu.

You can setup the RAID under operation system for Microsoft® Windows XP SP1 or Windows 2000 SP4 version, please install the Intel® Application Accelerator Ver.4.5 later to support RAID configuration with Intel® Matrix Storage Technology.

1. After installing Intel Application Accelerator, please execute Intel® Storage Utility.

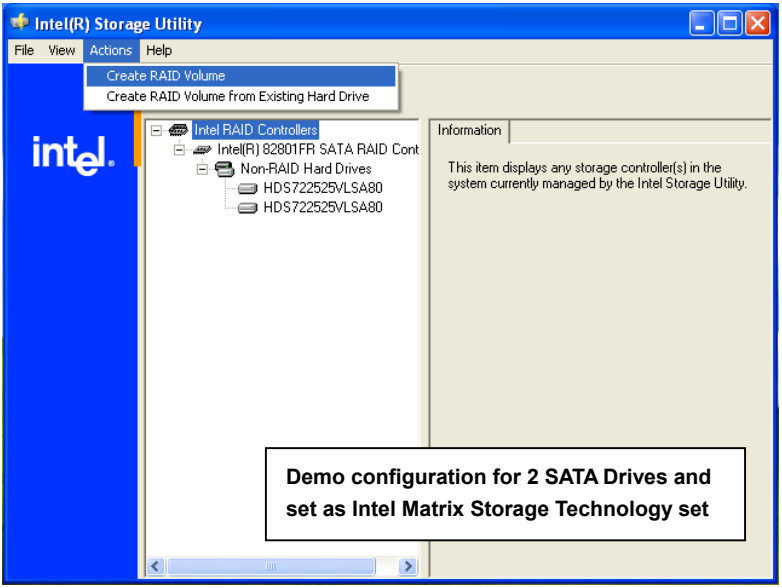
Intel(R) Storage Utility
File View Actions Help
Create RAID Volume
Create RAID Volume from Existing Hard Drive
intel.
Intel RAID Controllers
Intel(R) 82801FR SATA RAID Cont
Non-RAID Hard Drives
HDS722525VLSA80
HDS722525VLSA80
Information
This item displays any storage controller(s) in the system currently managed by the Intel Storage Utility.
Demo configuration for 2 SATA Drives and set as Intel Matrix Storage Technology set

2. Select Actions to Create RAID Volume

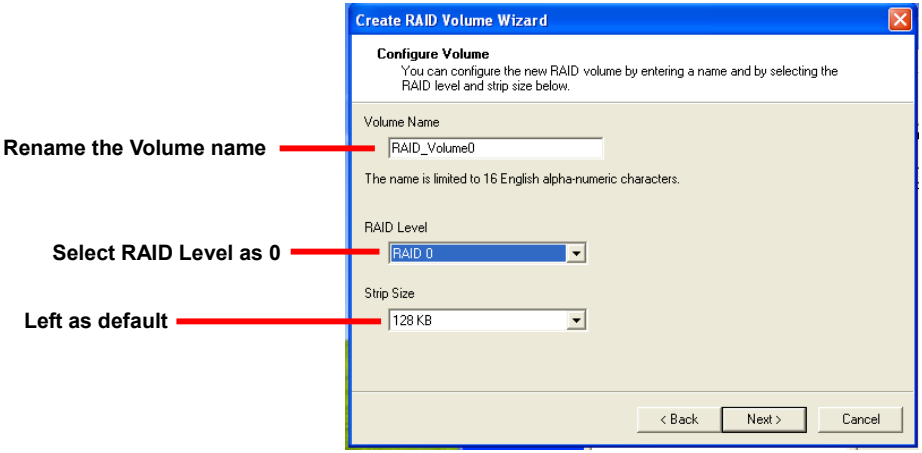
Rename the Volume name
Select RAID Level as 0
Left as default
Create RAID Volume Wizard
Configure Volume
You can configure the new RAID volume by entering a name and by selecting the RAID level and strip size below.
Volume Name
RAID_Volume0
The name is limited to 16 English alpha-numeric characters.
RAID Level
RAID 0
Strip Size
128 KB
< Back
Next >
Cancel

3. Please select two hard drives to prepare to set the RAID volume

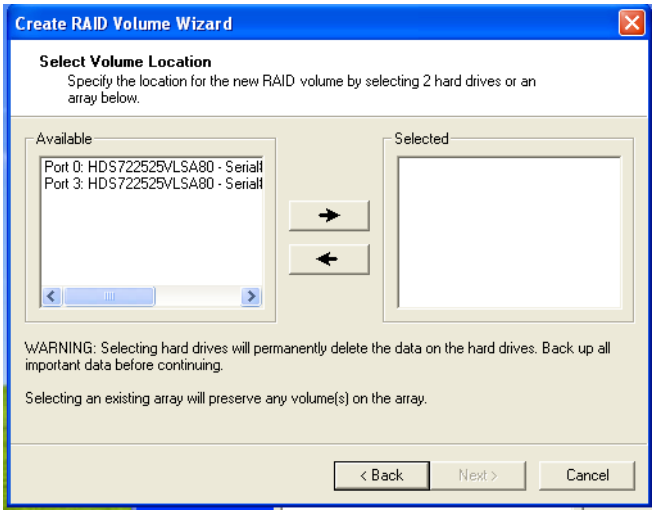
Create RAID Volume Wizard
Select Volume Location
Specify the location for the new RAID volume by selecting 2 hard drives or an array below.
Available
Port 0: HDS722525VLSA80 - SerialA
Port 3: HDS722525VLSA80 - SerialA
Selected
WARNING: Selecting hard drives will permanently delete the data on the hard drives. Back up all important data before continuing.
Selecting an existing array will preserve any volume(s) on the array.
< Back
Next >
Cancel

4. Specify the Volume size

Tune this bar to specify the volume size, if you specify the volume size lower than maximum, you can create a second volume for another RAID set.
(Make RAID 0+1 on only two hard drives)

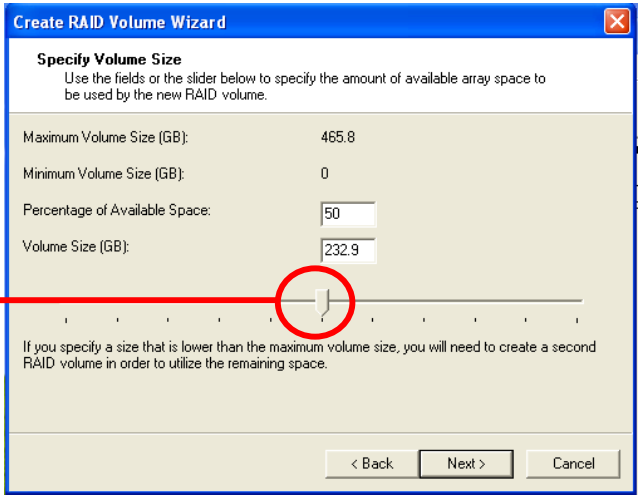
Create RAID Volume Wizard
Specify Volume Size
Use the fields or the slider below to specify the amount of available array space to be used by the new RAID volume.
Maximum Volume Size (GB): 465.8
Minimum Volume Size (GB): 0
Percentage of Available Space: 50
Volume Size (GB): 232.9
If you specify a size that is lower than the maximum volume size, you will need to create a second RAID volume in order to utilize the remaining space.
< Back
Next >
Cancel

5. Repeat the step 1 to create second volume as RAID Level 1.

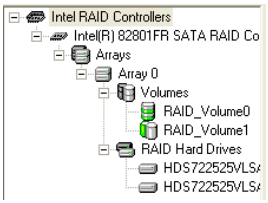

For other configuration set please click Help on tool bar.

3.3 <Audio Configuration>

The board integrates Intel ® ICH10DO with REAL TEK® ALC888 cod ec. It can suppo rt 2-channel sound under system configuration. Please follo w the steps below to setu p your sound system.

1. Install REALTEK HD Audio driver.

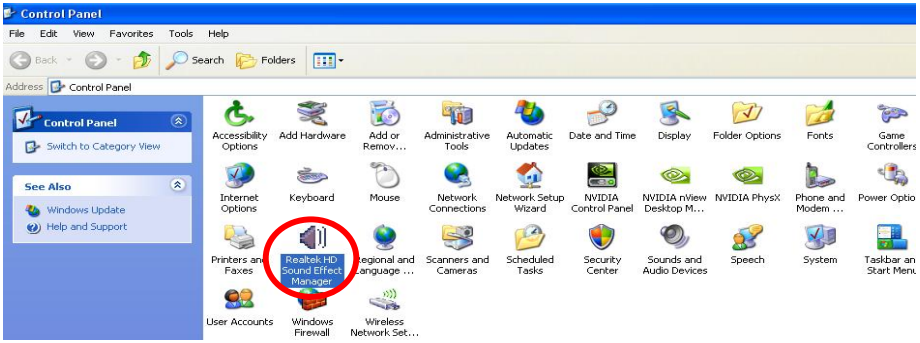

2. Lunch the control panel and Sound Effect Manager.

3. Select Speaker Configuration

4. Select the sound mode to meet your speaker system.

3.4 <Video Memory Setup>

Based on Intel ® Q45 chip set with GMA (Graphic Me dia Accelerator) 4500, the boa rd supports Intel® DVMT (D ynamic V ideo M emory T echnology) 3.0, which would allow the video memory be triggered up to 384MB.

To support DVMT, you need to install the Intel GMA4500 Driver with supported OS.

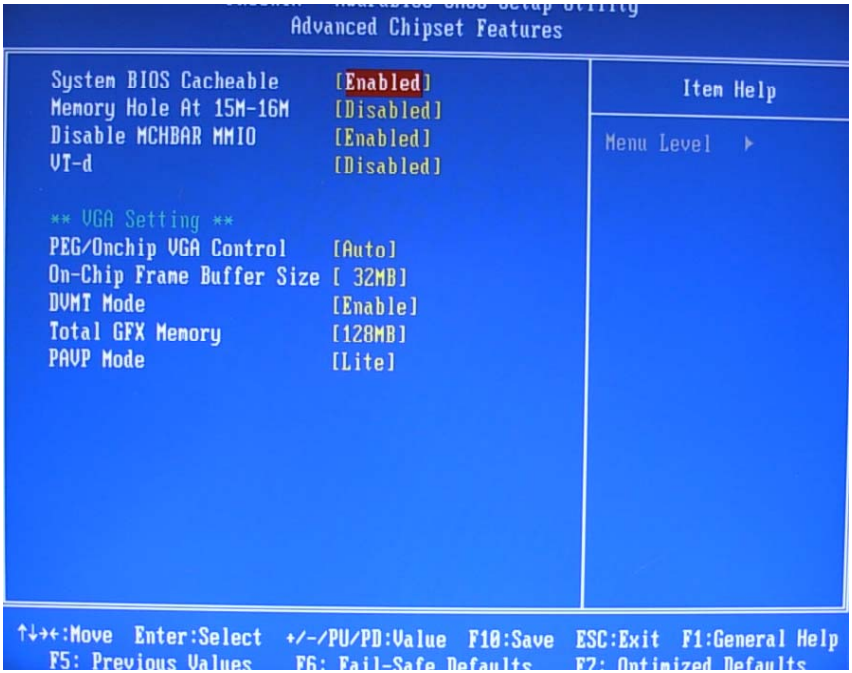
Advanced Chipset Features
System BIOS Cacheable [Enabled]
Memory Hole At 15M-16M [Disabled]
Disable MCHBAR MMIO [Enabled]
VT-d [Disabled]
** VGA Setting **
PEG/Onchip VGA Control [Auto]
On-Chip Frame Buffer Size [32MB]
DVMT Mode [Enable]
Total GFX Memory [128MB]
PAVP Mode [Lite]
Item Help
Menu Level
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

BIOS Setup:

On-Chip Frame Buffer Size:

This item can let you select video memory which been allocated for legacy VGA and SVGA graphics support and compatibility. The available option is **32MB** and **128MB**.

Total GFX Memory Size:

This item can let you select a static amount of page-locked graphics memory; which will be allocated during driver initialization. Once you select the memory amount, it will be no longer available for system memory.

DVMT Memory Size:

This item can let you select a maximum size of dynamic amount usage of video memory, the system would configure the video memory depends on your application, this item is strongly recommend to be selected as **MAX DVMT**.

Fixed + DVMT Memory Size:

You can select the fixed amount and the DVMT amount at the same time for a guaranteed video memory and additional dynamic video memory

Notice:

1. The On-Chip Frame Buffer Size would be included in the Total GFX Memory Size.

3.5 <Display Properties Setting>

Based on Intel Q45 GMCH with GMA4500 (Graphic Media Accelerator), the board supports two DACs for display device as different resolution and color bit.

Please install the Intel Graphic Driver before you starting setup display devices.

1. Click right button on the desktop to lunch **display properties**

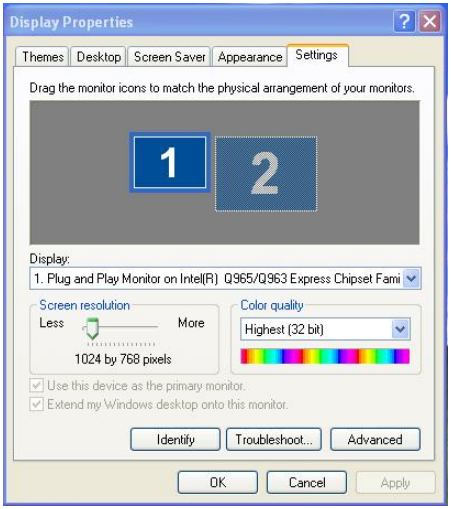

2. Click **Advanced** button for more specificity setup.

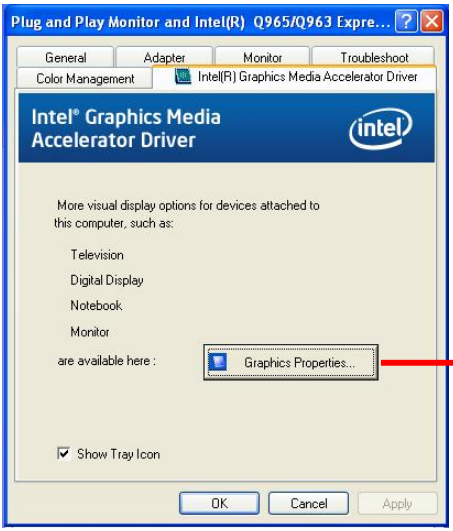

Click Graphics Properties... for advanced setup

3. This setup options can let you define each device settings.

Click Monitor to setup the CRT monitor for Colors, Resolution and Refresh Rate

Click Intel® Dual Display Clone to setup the dual display mode as same screen

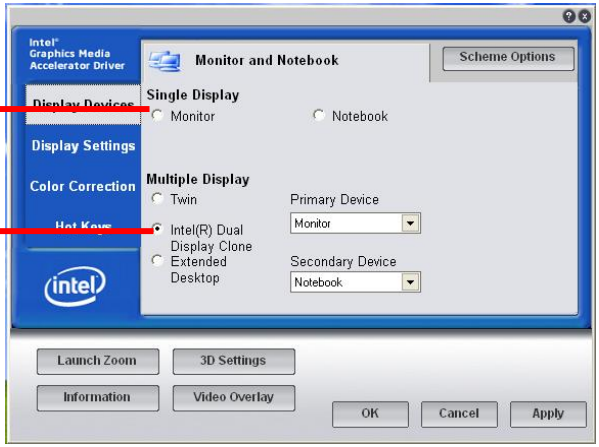

Set the main display device here

Click Extended Desktop to setup the dual display mode as different screen display

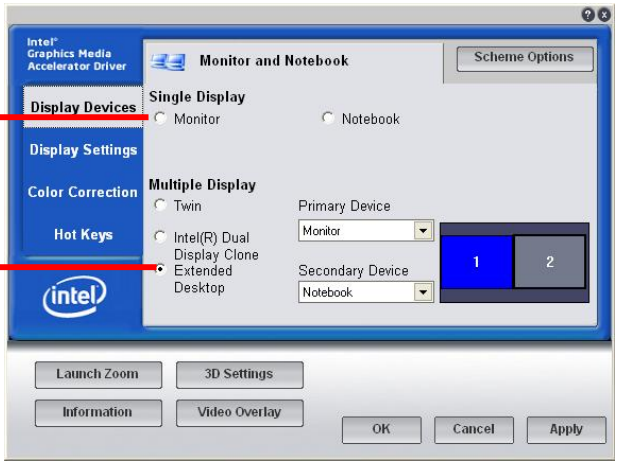

Chapter 4 <BIOS Setup>

The motherboard uses the Award BIOS for the system configuration. The Award BIOS in the single board computer is a customized version of the industrial standard BIOS for IBM PC AT-compatible computers. It supports Intel x86 and compatible CPU architecture based processors and computers. The BIOS provides critical low-level support for the system central processing, memory and I/O sub-systems.

The BIOS setup program of the single board computer let the customers modify the basic configuration setting. The settings are stored in a dedicated battery-backed memory, NVRAM, retains the information when the power is turned off. If the battery runs out of the power, then the settings of BIOS will come back to the default setting.

The BIOS section of the manual is subject to change without notice and is provided here for reference purpose only. The settings and configurations of the BIOS are current at the time of print, and therefore they may not be exactly the same as that displayed on your screen.

To activate CMOS Setup program, press ＜DEL＞ key immediately after you turn on the system. The following message "Press DEL to enter SET UP" should appear in the lower left hand corner of your screen. When you enter the CMOS Setup Utility, the Main Menu will be displayed as **Figure 4-1**. You can use arrow keys to select your function, press ＜Enter＞ key to accept the selection and enter the sub-menu.

Figure 4-1 CMOS Setup Utility Main Screen

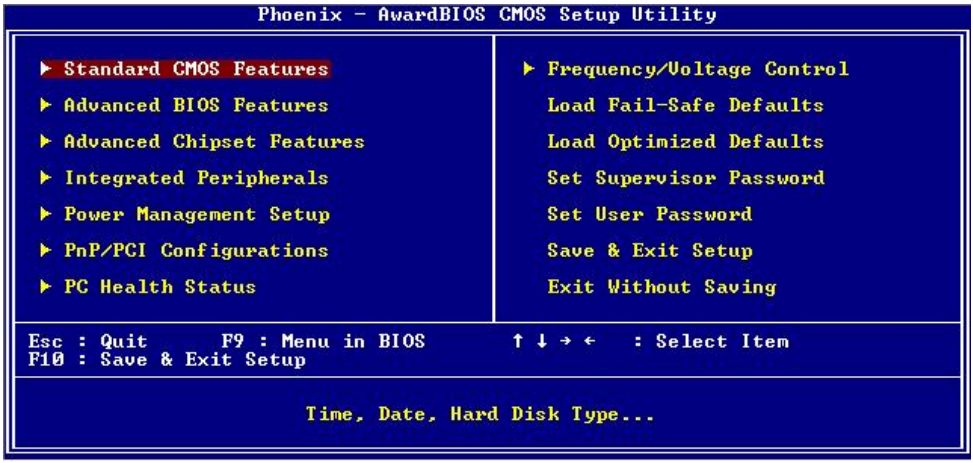

(This Page is Left for Blank)

Appendix A <I/O Port Pin Assignment>

A.1 <Serial ATA Port>

Connector: **SATA_1/2/3/4/5/6**

Type: 7-pin wafer connector

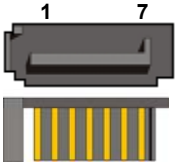

1	2	3	4	5	6	7
GND	RSATA_TXP1	RSATA_TXN1	GND	RSATA_RXN1	RSATA_RXP1	GND

A.2<Floppy Port>

Connector: **FDD**

Type: 34-pin connector

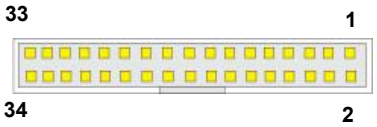

Pin	Description	Pin	Description
1	Ground	2	DRIVE DENSITY SELECT 0
3	Ground	4	N/C
5	Ground	6	N/C
7	Ground	8	INDEX-
9	Ground	10	MOTOR ENABLE A-
11	Ground	12	N/C
13	Ground	14	DRIVER SELECT A-
15	Ground	16	N/C
17	Ground	18	DIRECT ION-
19	Ground	20	ST EP-
21	Ground	22	W RITE DATA-
23	Ground	24	W RITE GATE-
25	Ground	26	T RACK 0-
27	Ground	28	W RITE PROTECT-
29	Ground	30	READ DATA-
31	Ground	32	HEAD SELECT-
33	Ground	34	DISK CHANGE-

A.3 <IrDA Port>

Connector: **CN_IR**
Type: 5-pin header for SIR Ports

Pin	Description
1	VCC
2	N/C
3	IRRX
4	Ground
5	IRT X

A.4 <Serial Port>



Connector: **COM1/2/3**
Type: 9-pin D-sub male connector on bracket

Pin	Description	Pin	Description
1	DCD	6	DSR
2	SIN	7	RTS
3	SO	8	CTS
4	DTR	9	RI
5	Ground		

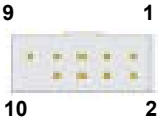

Connector: **COM4/5/6**
Type: 9-pin header connector for COM4

Pin	Description	Pin	Description
1	DCD	6	DSR
2	SIN	7	RTS
3	SO	8	CTS
4	DTR	9	RI
5	Ground		

A.5 <VGA Port>

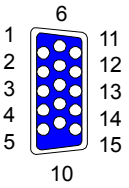

Connector: **CRT**
Type: 15-pin D-sub female connector on bracket

Pin	Description	Pin	Description	Pin	Description
1	RED	6	Ground	11	N/C
2	GREEN	7	Ground	12	DDC_DA
3	BLUE	8	Ground	13	HSYNC
4	N/C	9	+5V	14	VSYNC
5	Ground	10	Ground	15	DDC_CLK

A.6 <LAN Port>



Connector: **RJ451/2**
Type: RJ45 connector with LED on bracket

Pin	1	2	3	4	5
Description	TRD0+ T	RD0-	TRD1+	TRD2+	TRD2-
Pin	**6**	**7**	**8**	**9**	**10**
Description	TRD1- T	RD3+	TRD3-	NC	NC

Appedix B <System Resources>

B.1 <I/O Port Address Map>

[00000000 - 0000000F] Direct memory access controller
[00000000 - 00000CF7] PCI bus
[00000010 - 0000001F] Motherboard resources
[00000020 - 00000021] Programmable interrupt controller
[00000022 - 0000003F] Motherboard resources
[00000040 - 00000043] System timer
[00000044 - 0000005F] Motherboard resources
[00000060 - 00000060] Standard 101/102-Key or Microsoft Natural PS/2 Keyboard
[00000061 - 00000061] System speaker
[00000062 - 00000063] Motherboard resources
[00000064 - 00000064] Standard 101/102-Key or Microsoft Natural PS/2 Keyboard
[00000065 - 0000006F] Motherboard resources
[00000070 - 00000073] System CMOS/real time clock
[00000074 - 0000007F] Motherboard resources
[00000080 - 00000090] Direct memory access controller
[00000091 - 00000093] Motherboard resources
[00000094 - 0000009F] Direct memory access controller
[000000A0 - 000000A1] Programmable interrupt controller
[000000A2 - 000000BF] Motherboard resources
[000000C0 - 000000DF] Direct memory access controller
[000000E0 - 000000EF] Motherboard resources
[000000F0 - 000000FF] Numeric data processor
[00000274 - 00000277] ISAPNP Read Data Port
[00000279 - 00000279] ISAPNP Read Data Port
[00000280 - 00000287] Communications Port (COM3)
[00000288 - 0000028F] Communications Port (COM4)
[000002A0 - 000002A7] Communications Port (COM5)
[000002A8 - 000002AF] Communications Port (COM6)
[000002F8 - 000002FF] Communications Port (COM2)
[00000378 - 0000037F] Printer Port (LPT1)
[000003B0 - 000003BB] Intel(R) Q45/Q43 Express Chipset
[000003C0 - 000003DF] Intel(R) Q45/Q43 Express Chipset
[000003F0 - 000003F5] Standard floppy disk controller
[000003F7 - 000003F7] Standard floppy disk controller
[000003F8 - 000003FF] Communications Port (COM1)
[00000400 - 000004BF] Motherboard resources
[000004D0 - 000004D1] Motherboard resources
[00000500 - 0000051F] Intel(R) ICH10 Family SMBus Controller - 3A60

[00000778 - 0000077B] Printer Port (LPT1)
[00000880 - 0000088F] Motherboard resources
[00000A79 - 00000A79] ISAPNP Read Data Port
[00000D00 - 0000FFFF] PCI bus
[00007000 - 00007FFF] Intel(R) ICH10 Family PCI Express Root Port 1 - 3A70
[00009000 - 00009FFF] Intel(R) ICH10 Family PCI Express Root Port 6 - 3A7A
[00009C00 - 00009C1F] Intel(R) 82574L Gigabit Network Connection
[0000A000 - 0000AFFF] Intel(R) ICH10 Family PCI Express Root Port 5 - 3A78
[0000AC00 - 0000AC1F] Intel(R) 82574L Gigabit Network Connection #2
[0000B000 - 0000B00F] Intel(R) ICH10 Family 2 port Serial ATA Storage Controller 2 - 3A06
[0000B400 - 0000B40F] Intel(R) ICH10 Family 2 port Serial ATA Storage Controller 2 - 3A06
[0000B800 - 0000B803] Intel(R) ICH10 Family 2 port Serial ATA Storage Controller 2 - 3A06
[0000BC00 - 0000BC07] Intel(R) ICH10 Family 2 port Serial ATA Storage Controller 2 - 3A06
[0000C000 - 0000C003] Intel(R) ICH10 Family 2 port Serial ATA Storage Controller 2 - 3A06
[0000C400 - 0000C407] Intel(R) ICH10 Family 2 port Serial ATA Storage Controller 2 - 3A06
[0000CC00 - 0000CC0F] Intel(R) ICH10 Family 4 port Serial ATA Storage Controller 1 - 3A00
[0000D000 - 0000D00F] Intel(R) ICH10 Family 4 port Serial ATA Storage Controller 1 - 3A00
[0000D400 - 0000D403] Intel(R) ICH10 Family 4 port Serial ATA Storage Controller 1 - 3A00
[0000D800 - 0000D807] Intel(R) ICH10 Family 4 port Serial ATA Storage Controller 1 - 3A00
[0000DC00 - 0000DC03] Intel(R) ICH10 Family 4 port Serial ATA Storage Controller 1 - 3A00
[0000E000 - 0000E007] Intel(R) ICH10 Family 4 port Serial ATA Storage Controller 1 - 3A00
[0000E400 - 0000E41F] Intel(R) ICH10 Family USB Universal Host Controller - 3A66
[0000E800 - 0000E81F] Intel(R) ICH10 Family USB Universal Host Controller - 3A65
[0000EC00 - 0000EC1F] Intel(R) ICH10 Family USB Universal Host Controller - 3A64
[0000F000 - 0000F01F] Intel(R) ICH10 Family USB Universal Host Controller - 3A69
[0000F400 - 0000F41F] Intel(R) ICH10 Family USB Universal Host Controller - 3A68
[0000F800 - 0000F81F] Intel(R) ICH10 Family USB Universal Host Controller - 3A67
[0000FC00 - 0000FC07] Intel(R) Q45/Q43 Express Chipset

B.2 <Memory Address Map>

[00000000 - 0009FFFF] System board
[000A0000 - 000BFFFF] Intel(R) Q45/Q43 Express Chipset
[000A0000 - 000BFFFF] PCI bus
[000C0000 - 000DFFFF] PCI bus
[000E0000 - 000EFFFF] System board
[000F0000 - 000FFFFF] System board
[00100000 - 7DC8FFFF] System board
[7DC90000 - 7DCFFFFF] System board
[7DD00000 - 7DDFFFFF] System board
[7DD00000 - FEBFFFFF] PCI bus
[D0000000 - DFFFFFFF] Intel(R) Q45/Q43 Express Chipset
[E0000000 - EFFFFFFF] Motherboard resources
[FD000000 - FD3FFFFF] Intel(R) Q45/Q43 Express Chipset
[FD600000 - FD6FFFFF] Intel(R) ICH10 Family PCI Express Root Port 1 - 3A70
[FD700000 - FD7FFFFF] Intel(R) ICH10 Family PCI Express Root Port 1 - 3A70
[FDB00000 - FDBFFFFF] Intel(R) ICH10 Family PCI Express Root Port 6 - 3A7A
[FDC00000 - FDCFFFFF] Intel(R) ICH10 Family PCI Express Root Port 6 - 3A7A
[FDCC0000 - FDCDFFFF] Intel(R) 82574L Gigabit Network Connection
[FDCFC000 - FDCFFFFF] Intel(R) 82574L Gigabit Network Connection
[FDD00000 - FDDFFFFF] Intel(R) ICH10 Family PCI Express Root Port 5 - 3A78
[FDE00000 - FDEFFFFF] Intel(R) ICH10 Family PCI Express Root Port 5 - 3A78
[FDEC0000 - FDEDFFFF] Intel(R) 82574L Gigabit Network Connection #2
[FDEFC000 - FDEFFFFF] Intel(R) 82574L Gigabit Network Connection #2
[FDFF8000 - FDFFBFFF] Microsoft UAA Bus Driver for High Definition Audio
[FDFFD000 - FDFFD0FF] Intel(R) ICH10 Family SMBus Controller - 3A60
[FDFFE000 - FDFFE3FF] Intel(R) ICH10 Family USB Enhanced Host Controller - 3A6A
[FDFFF000 - FDFFF3FF] Intel(R) ICH10 Family USB Enhanced Host Controller - 3A6C
[FEB00000 - FEBFFFFF] Intel(R) Q45/Q43 Express Chipset
[FEC00000 - FEC00FFF] System board
[FED00000 - FED000FF] System board
[FED00000 - FED003FF] High precision event timer
[FED13000 - FED1FFFF] System board
[FED20000 - FED9FFFF] System board
[FEE00000 - FEE00FFF] System board
[FFB00000 - FFB7FFFF] System board
[FFB80000 - FFBFFFFF] Intel(R) 82802 Firmware Hub Device
[FFF00000 - FFFFFFFF] System board

B.3 <System IRQ Resources>

(ISA) 0 High precision event timer
(ISA) 1 Standard 101/102-Key or Microsoft Natural PS/2 Keyboard
(ISA) 3 Communications Port (COM2)
(ISA) 3 Communications Port (COM3)
(ISA) 4 Communications Port (COM1)
(ISA) 4 Communications Port (COM4)
(ISA) 5 Communications Port (COM5)
(ISA) 6 Standard floppy disk controller
(ISA) 7 Communications Port (COM6)
(ISA) 8 High precision event timer
(ISA) 9 Microsoft ACPI-Compliant System
(ISA) 13 Numeric data processor
(PCI) 11 Intel(R) ICH10 Family SMBus Controller - 3A60
(PCI) 16 Intel(R) 82574L Gigabit Network Connection #2
(PCI) 16 Intel(R) ICH10 Family PCI Express Root Port 1 - 3A70
(PCI) 16 Intel(R) ICH10 Family PCI Express Root Port 5 - 3A78
(PCI) 16 Intel(R) ICH10 Family USB Universal Host Controller - 3A67
(PCI) 16 Intel(R) Q45/Q43 Express Chipset
(PCI) 17 Intel(R) 82574L Gigabit Network Connection
(PCI) 17 Intel(R) ICH10 Family PCI Express Root Port 6 - 3A7A
(PCI) 18 Intel(R) ICH10 Family USB Enhanced Host Controller - 3A6C
(PCI) 18 Intel(R) ICH10 Family USB Universal Host Controller - 3A66
(PCI) 19 Intel(R) ICH10 Family 2 port Serial ATA Storage Controller 2 - 3A06
(PCI) 19 Intel(R) ICH10 Family 4 port Serial ATA Storage Controller 1 - 3A00
(PCI) 19 Intel(R) ICH10 Family USB Universal Host Controller - 3A69
(PCI) 19 Intel(R) ICH10 Family USB Universal Host Controller - 3A65
(PCI) 21 Intel(R) ICH10 Family USB Universal Host Controller - 3A68
(PCI) 22 Microsoft UAA Bus Driver for High Definition Audio
(PCI) 23 Intel(R) ICH10 Family USB Enhanced Host Controller - 3A6A
(PCI) 23 Intel(R) ICH10 Family USB Universal Host Controller - 3A64

Appedix C <Flash BIOS>

C.1 <BIOS Auto Flash Tool>

The board is based on Award BIOS and can be updated easily by the BIOS auto flash tool. You can download the tool online at the address below:

http://www.award.com

File name of the tool is "awdflash.exe", it's the utility that can write the data into the BIOS flash ship and update the BIOS.

C.2 <Flash Method>

1. Please make a bootable floppy disk.
2. Get the last .bin files you want to update and copy it into the disk.
3. Copy awardflash.exe to the disk.
4. Power on the system and flash the BIOS. (Example: C:/ awardflash XXX.bin)
5. Re-star the system.

Any question about the BIOS re-flash please contact your distributors or visit the web-site at below:

Appendix D <Programming GPIO's>

The GPIO'can be programmed with the MSDOS debug program using simple IN/OUT commands.The following lines show an example how to do this.

```
GPIO0…..GPIO7  bit0……bit7
-o 2E 87          ;enter          configuration
-o 2E 87
-o 2E 07
-o 2F 09          ;enale          GPIO function
-o 2E 30
-o 2F 02          ;enable          GPIO configuration
-o 2E F0
-o 2F xx                ;set GPIO as input/output; set '1' for input,'0'for output
-o 2E F1
-o 2F xx          ;if          set GPIO's as output,in this register its value can be set

Optional :
-o 2E F2
-o 2F xx                ; Data inversion register ; '1' inverts the current valus of the bits ,'0'
                          leaves them as they are
-o 2E 30
-o 2F 01                ; active GPIO's
```

For further information ,please refer to Winbond W83627DHG datasheet.

Appendix E <Watch Dog timer Setting >

The watchdog timer makes the system auto-reset while it stops to work for a period. The integrated watchdog timer can be setup as system reset mode by program.

Timeout Value Range

- 1 to 255
- Second or Minute

Program Sample

Watchdog timer setup as system reset with 5 second of timeout

2E, 87	
2E, 87	
2E, 07	
2F, 08	Logical Device 8
2E, 30	Activate
2F, 01	
2E, F5	Set as Second*
2F, 00	
2E, F6	Set as 5
2F, 05	

* Minute: bit 3 = 0; Second: bit 3 = 1

You can select Timer setting in the BIOS, after setting the time options, the system will reset according to the period of your selection.

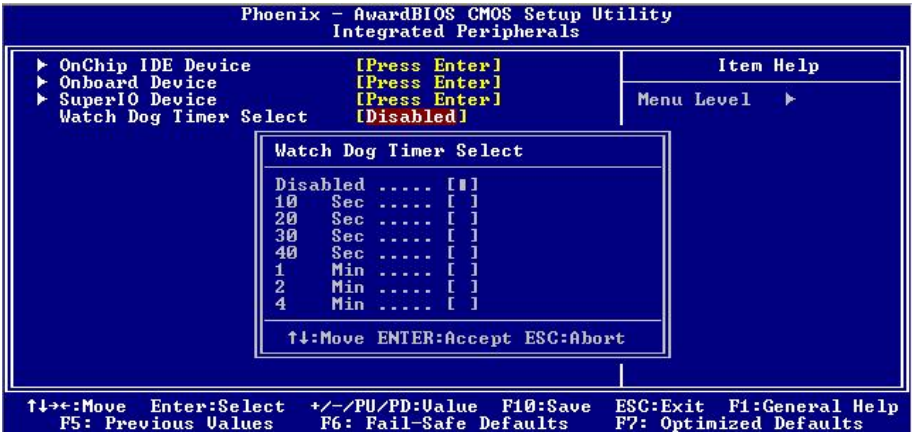
Phoenix - AwardBIOS CMOS Setup Utility
Integrated Peripherals
OnChip IDE Device [Press Enter]
Onboard Device [Press Enter]
SuperIO Device [Press Enter]
Watch Dog Timer Select [Disabled]
Item Help
Menu Level ▶
Watch Dog Timer Select
Disabled ..... [▮]
10 Sec ..... [ ]
20 Sec ..... [ ]
30 Sec ..... [ ]
40 Sec ..... [ ]
1 Min ..... [ ]
2 Min ..... [ ]
4 Min ..... [ ]
↑↓:Move ENTER:Accept ESC:Abort
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

Any advice or comment about our products and service, or anything we can help you please don't hesitate to contact with us. We will do our best to support you for your products, projects and business. **P**

Portwell Technology Inc.

Address 44200 Christy Street, Fremont, CA 94538

Website http://www.portwell.com